

# Installation Instructions

## 2100 Canon L-50 Toner Low Sensor Bar

For Technical Support, please call Memphis, TN at (888) 757-0762 or Nashua, NH at (888) 833-5727.



**Reference Information:**

The Toner Low Sensor Bar is used to convert an HP 2100 toner cartridge for use in the Canon L-50.

**Please note that the Toner Low Sensor Bar must be used in conjunction with the L-50 Conversion Tab.**

**Oasis Products:**

2100 Canon L-50 Conversion Tab (21CP10)

2100 Canon L-50 Toner Low Sensor Bar (21CP12)

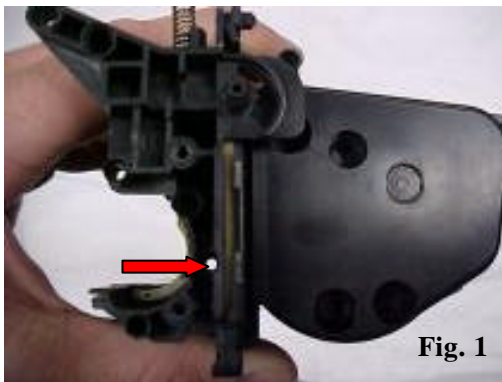


Fig. 1

1. The toner hopper section must be completely disassembled, including removal of the Dr. Blade. Using a 1/8<sup>th</sup> inch drill bit, make a small hole as indicated in figure one.

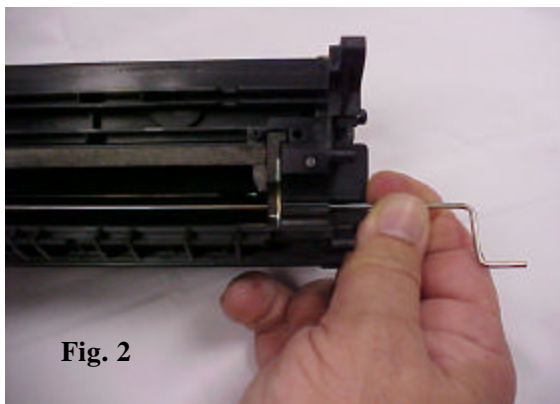


Fig. 2


2. Carefully insert the toner low sensor bar into the hole. Keep pushing the bar in until it reaches the other side of the hopper where the end of the bar will fit into an existing hole. Take care to insure that the plastic grommet on the bar fits into the hole.

? *It is highly recommended that a small amount of silicone sealant be applied around the outside of the drill hole to insure that there is no leakage.*


## Installation Instructions

2100 Canon L-50 Toner Low Sensor Bar &  
2100 Canon L-50 Conversion Tab

Technical Support  
Memphis, TN (888) 757-0762  
Nashua, NH (888) 833-5727

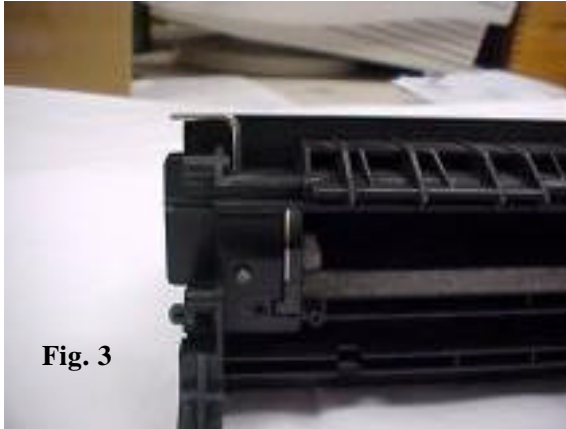


3. Note the location of the installed toner sensor bar.

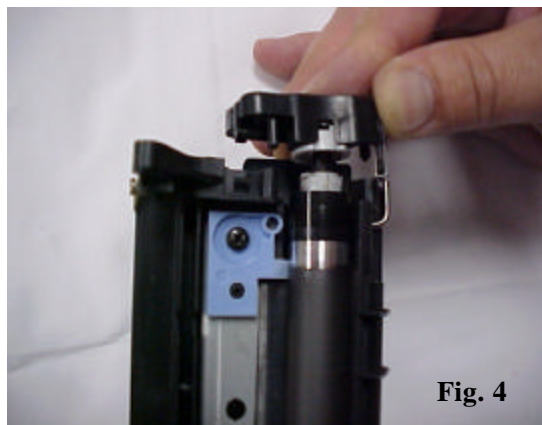

4. Reattach mag roller contact end-cap. Note the position of the end of the sensor tab. It should align with a small hole on the inside of the mag roller contact end cap.

**! Remember to add the L-50 conversion tab. This tab must be in place for the cartridge to be used in the L-50 series copiers.**

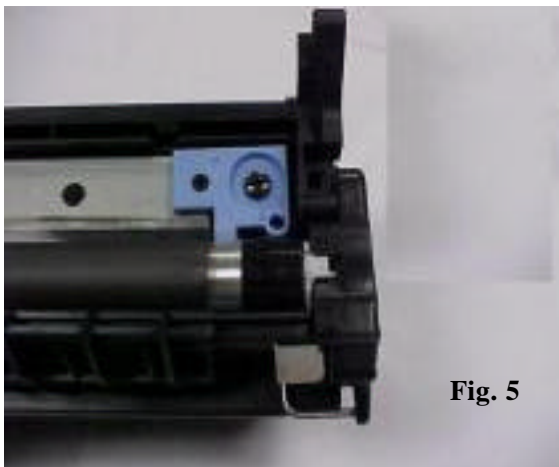

5. Once the contact end-cap has been re-installed, it should fit snugly over the end of the toner low sensor bar.

If the end cap is bowed out slightly near the connection with the toner low bar, than the bar has not been pushed all the way into the hole on the opposite end of the cartridge.

## Oasis and You ... Succeeding Together!



---

**New Hampshire**  
(603) 880-3991  
(800) 322-8992  
Fax: (603) 598-4277

**Tennessee**  
(901) 433-0334  
Fax: (901) 366-9756

**Texas**  
(972) 671-1307  
(888) 591-3555  
Fax: (972) 671-1359

**Canada**  
(905) 568-3422  
(800) 430-7886  
Fax: (905) 568-3491

**Illinois**  
(630) 982-1543  
(888) 658-4555  
Fax: (630) 928-1542

**California**  
(714) 283-6270  
(888) 656-9555  
Fax: (714) 283-6276

**North Carolina**  
(919) 776-0847  
(866) 399-8558  
Fax: (919) 776-0898

**Europe**  
**Netherlands**  
011-31-24-388-2233  
Fax: 011-31-24-355-7373

---

© 2004 Oasis Imaging Products, Inc. Any attempt to reproduce any part of these instructions without the written consent of Oasis Imaging Products, Inc. may result in legal action. All registered trademarks are the property of their respective owners.