

Remanufacturing Instructions

Dell 1320c

For Technical Support, please call (800) 322 8992 ext. 110



OEM Reference Information:

Part #		Yield @ 5%
3109058	Black	2000
3109060	Cyan	2000
3109062	Yellow	2000
3109064	Magenta	2000

1. Remove the black sealing tape from the seam of the cartridge (Fig. 1).

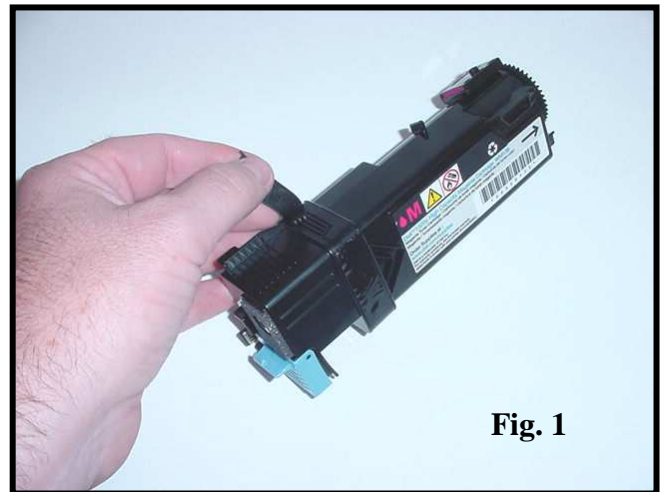


Fig. 1

2. Use a small flat head screw driver to release two of the locking tabs that secure the waste unit to the top of the toner hopper (Fig. 2).

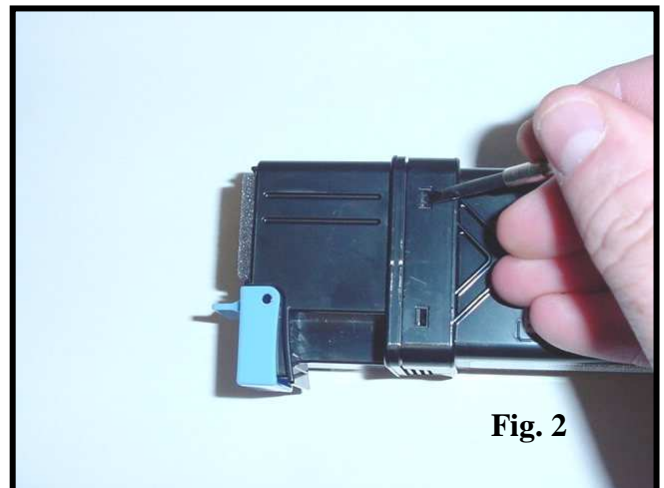


Fig. 2

3. Remove the waste unit and clean all residual toner (Fig. 3).

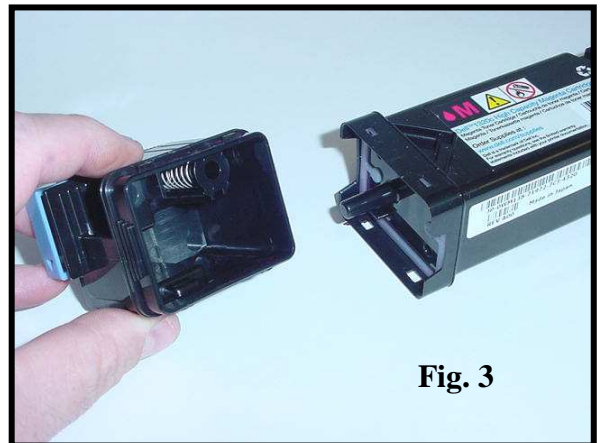


Fig. 3

4. Remove the toner hopper cover (Fig. 4). Clean all residual toner from the cover with compressed air and toner towel.

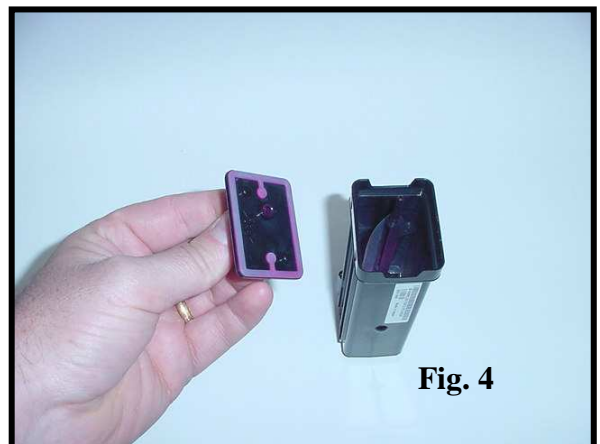


Fig. 4

5. Slide open the cover on the bottom of the toner hopper (Fig. 5). Used compressed air to thoroughly clean the remaining toner from the hopper.

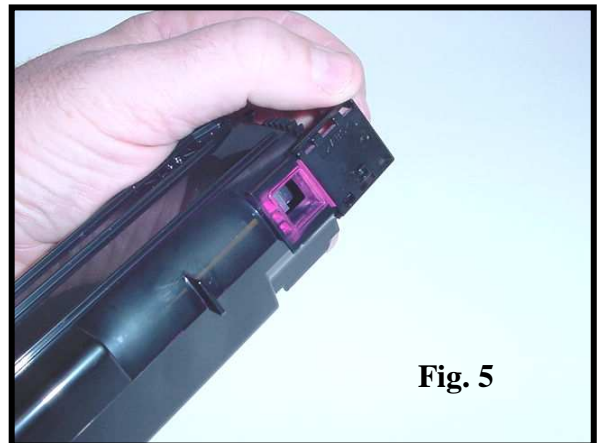


Fig. 5

6. Close the slide cover and fill the hopper with the correct color toner, and the correct gram load (Fig. 6).



Fig. 6

7. Place the clean cover on the toner hopper. Install the waste unit, make sure that the locking tabs are all in place. Re-use or replace the black tape that goes across the seam of the cartridge (Fig. 7).

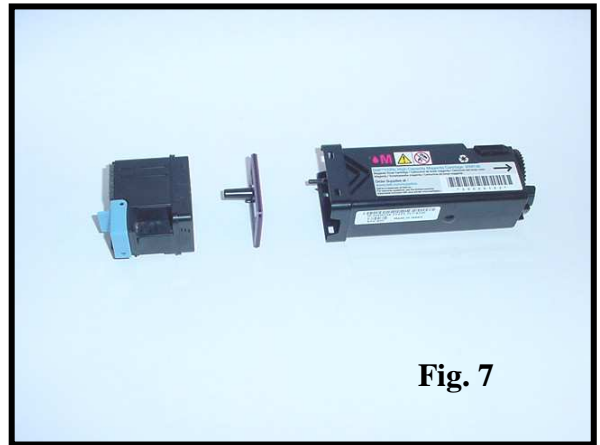


Fig. 7

8. Release the locking tab on the Chip housing (Fig. 8)

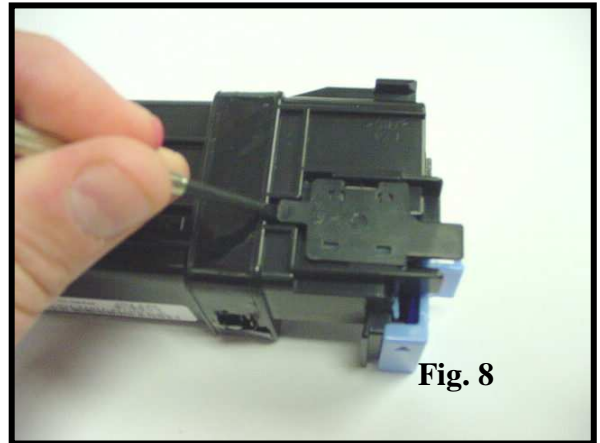


Fig. 8

9. Slide the housing from the toner cart (Fig. 9).

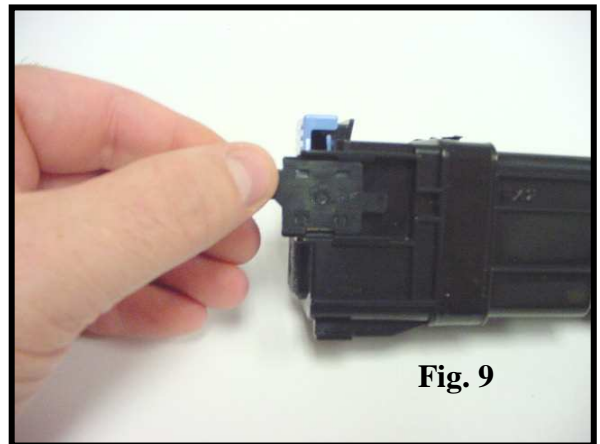


Fig. 9

10. Replace with the appropriate color chip and slide the housing back onto the toner hopper (Fig. 10).

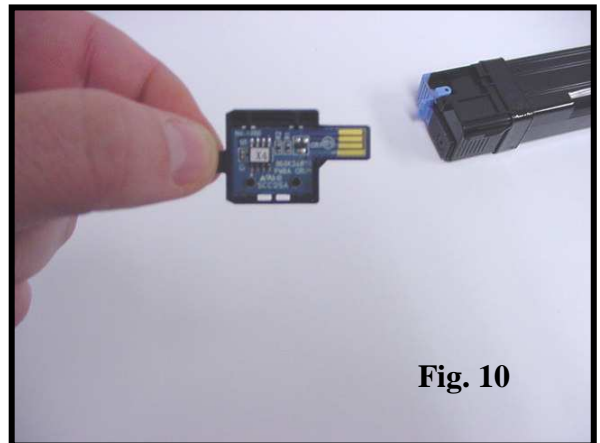


Fig. 10

Oasis and You ... Succeeding Together!



To reach all offices in the US & Canada call (800) 322 - 8992

Illinois

Fax: (972) 692-6976

California

Fax: ((714) 908-7788

Texas

Fax: (972) 692-6976

Canada

Fax: (972) 692-6976

North Carolina

Fax: (603) 386-7575

**Corporate Offices
New Hampshire**

(603) 880-3991

Fax: (603) 598-4277

**Tennessee
R & D Center**

Fax: (901) 366-9756

**South America
International:**

(603) 880-1552

Fax: (603) 386-7575

**Europe
Netherlands**

011-31-24-388-2233

Fax: 011-31-24-355-7373

© 2007 Oasis Imaging Products, Inc. Any attempt to reproduce any part of these instructions without the written consent of Oasis Imaging Products, Inc. may result in legal action. All registered trademarks are the property of their respective owners.
