

PANASONIC / PANAFAX UF- 585/595



Oasis Imaging Products, Inc. Technical Support call (800) 322-8992 ext 110

Reference Information:
UG 3350

OEM Yields:
7500 @ 5% Coverage
400 DPI



Fig.1

1. Using needle nose pliers, remove the pins on each end of the cartridge that secure the two halves (Fig. 1).



Fig.2

2. Once the pins are removed separate the cartridge halves (Fig. 2).

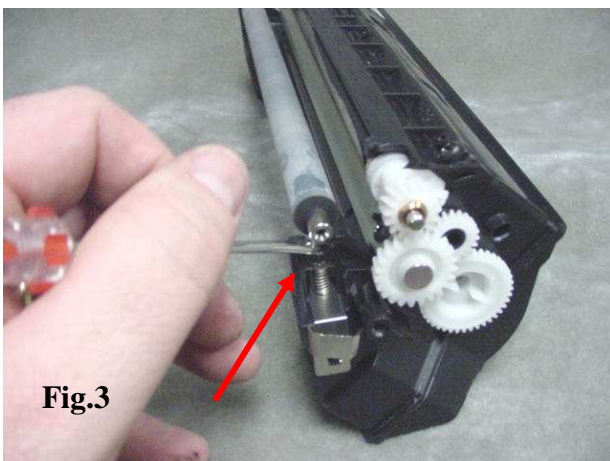


Fig.3

3. Using a small flathead screwdriver remove the PCR from the saddle clips (Fig. 3).



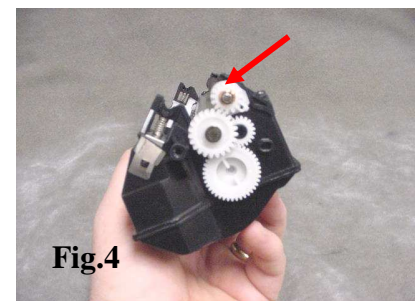


Fig.4


4. Remove the mag roller drive gear from the end of the mag on the gear side of the cartridge (Fig. 4).

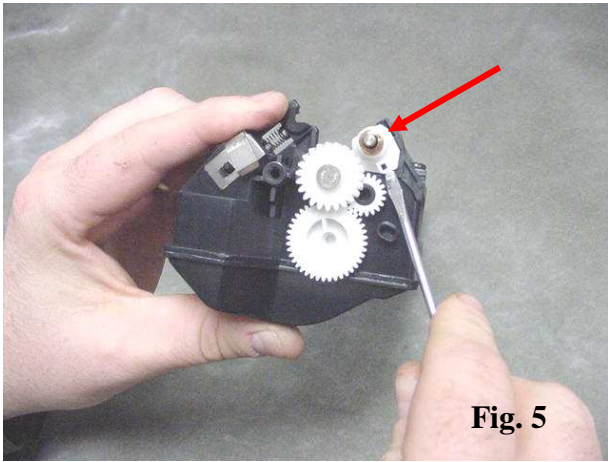


5. Using a small flathead screwdriver, Pry up on the mag roller stabilizer and remove it from the roller (Fig. 5).

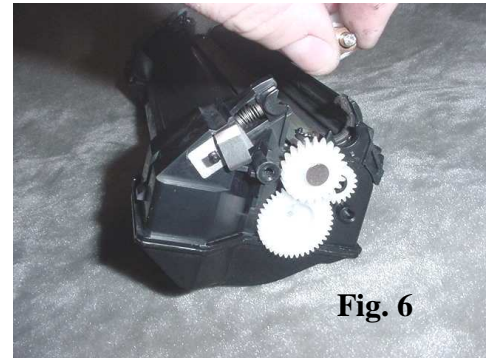


6. Remove the mag and clean with compressed air for reassembly (Fig. 6).

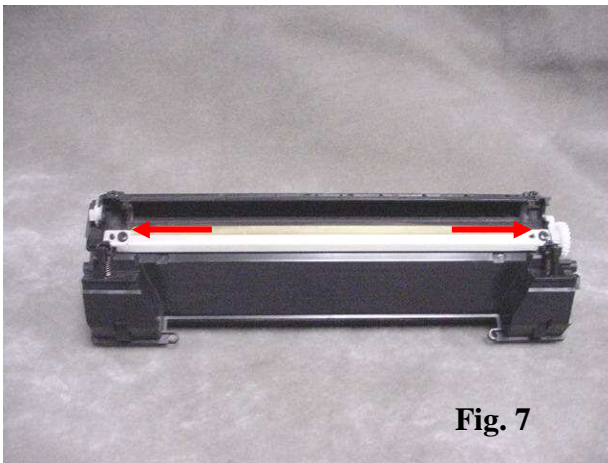

7. Remove the 2 screws that secure the doctor blade in place (Fig. 7). Empty remaining toner in hopper and clean with compressed air.

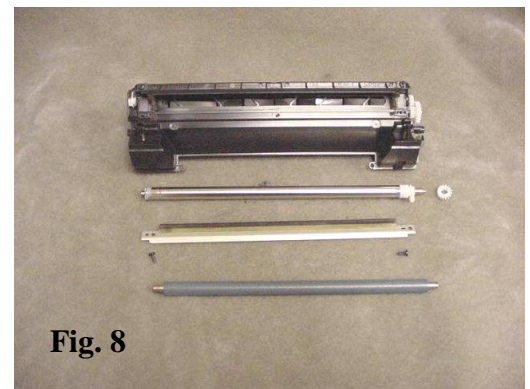

8. Add toner, clean all components and reassemble in reverse order (fig. 8).

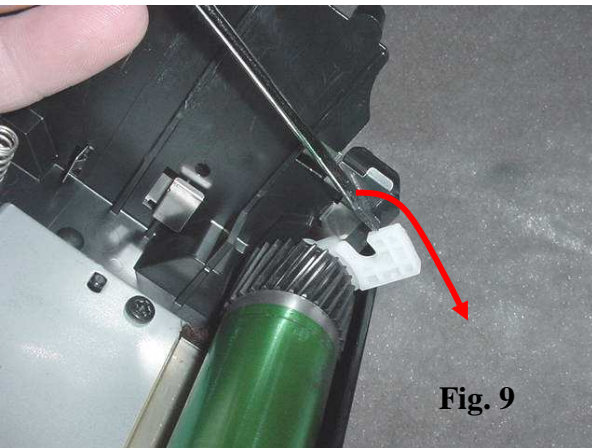


9. Using a small screwdriver remove the drum-locking tab from the large gear end of the cartridge (Fig. 9).



10. Remove the axle rod from the drum (fig.10).

11. Remove the drum from the waste unit (Fig.11).




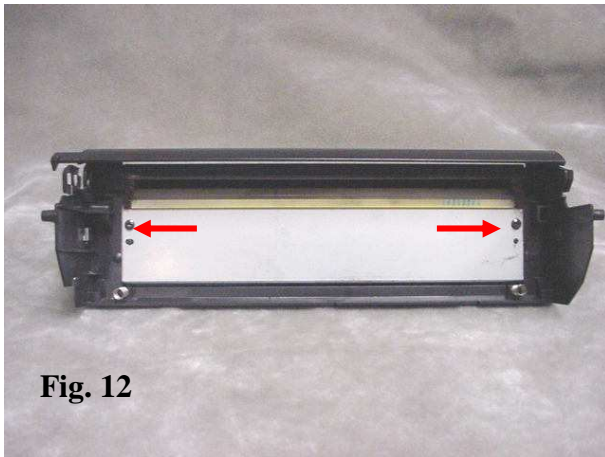

12. Remove the two screws that secure the wiper blade in place (Fig. 12).



13. When removing the blade, pry up on the wiper felts on both ends of the blade (Fig. 13).

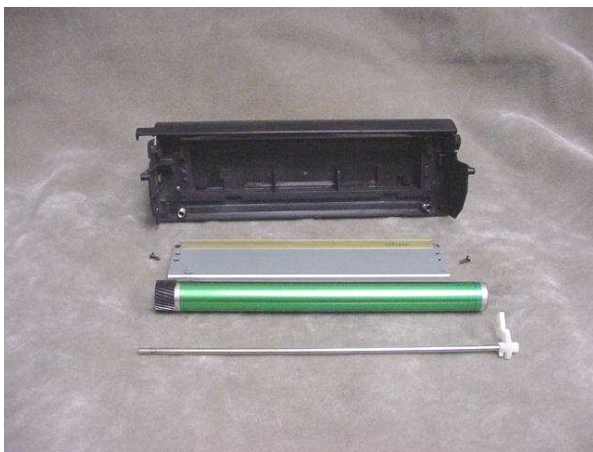

14. Remove all waste toner from the waste bin using compressed air. Check Mylar for damage. Replace wiper blade and drum and reassemble in reverse order (Fig. 14).

Oasis and You ... Succeeding Together!



New Hampshire
 (603) 880-3991
 (800) 322-8992
 Fax: (603) 598-4277

Tennessee
 (800) 322-8992
 Fax: (901) 366-9756

Texas
 (800) 322-8992
 Fax: (972) 692-6976

Canada
 (800) 322-8992
 Fax: (972) 692-6976

South America
 (800) 322-8992
 International:
 (603) 880-1552
 Fax: (603) 386-7575

Illinois
 (800) 322-8992
 Fax: (972) 692-6976

California
 (800) 322-8992
 Fax: (714) 908-7788

North Carolina
 (800) 322-8992
 Fax: (603) 386-7575

Europe
Netherlands
 011-31-24-388-2233
 Fax: 011-31-24-355-7373